



## FRONT FENDER ACCENT 8643

### TRAILING EDGE

**FITS: STREET GLIDE, ROAD GLIDE, ROAD KING CUSTOM, SCREAMIN' EAGLE DRESSERS OR ROAD KINGS (EX. '07 FLHRSE)**

#### PARTS INCLUDED

- 1 Front Fender Accent
- 1 Alcohol Pad
- 1 Installation Instructions

*Please read and understand entire instructions before starting installation.*

### THANK YOU FOR CHOOSING KÜRYAKYN!

**IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.**

**ATTENTION!** This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

### TOOLS SUGGESTED

Warm soapy water and a clean rag.

**STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.**

### PROCEDURE

**STEP 1** Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition.

**STEP 2** Clean the front fender using warm soapy water and a clean rag and allow to dry.

**STEP 3** Clean the trailing edge of the front fender with the included alcohol pad (PIC. 1).

**STEP 4** Test fit the accent on the fender; the flat edges of the trim accent (shown in PIC. 2) will be placed at the bottom edge of the fender.

**STEP 5** Using the back of your fingernail, rub the backing of the adhesive pad to activate the catalyst.

**-cont.-**

**PIC. 1**



**CUSTOMER SERVICE**  
877.370.3604 (toll free)

**INSTALLATION QUESTIONS**  
techsupport@kuryakyn.com  
or call 715.247.2983

#### LIMITED WARRANTY

Küryakyn warrants that any Küryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Küryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
- The product must be properly installed, maintained and operated under normal conditions.
- Küryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
- Küryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Küryakyn product, failure to deliver, delay in delivery, delivery in non-conforming condition, or for any breach of contract or duty between Küryakyn and a customer.
- Küryakyn products are often intended for use in specific applications. Küryakyn makes no warranty if a Küryakyn product is used in applications other than intended.
- Küryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. Components of Küryakyn products containing L.E.D.s will be warranted for defects in materials and workmanship for 3 years from the date of purchase.
- Küryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Küryakyn. Küryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

#### ABOUT OUR CATALOG

You'll find all our innovations for H-D, GL and Metric Cruisers in our annual catalogs. Order online today—select the "CATALOGS" icon. Each Küryakyn® product comes with a Proof-of-Purchase good for a complimentary catalog. Details in packaging.

Be sure to ask your local dealer about other Küryakyn products, the motorcycle parts and accessories designed for riders by riders.

©2005 Küryakyn USA® All Rights reserved.



**ATTENTION!** Ensure the area of installation is free of grease, oil, dirt or other debris to ensure proper adhesion. Kuryakyn WILL NOT warranty any parts lost due to improper installation.

**Kuryakyn**<sup>®</sup>

**ATTENTION!** The adhesive will not bond correctly if applied at temperatures less than 50° F.  
Do not attempt this installation in temperatures less than 50° F.

**STEP 6** Starting at the center, peel the adhesive backing, stopping before reaching the curve in the trim accent; do not remove the backing, leave the ends hanging as shown in PIC. 2.

**STEP 7** Install the trim on the fender; push in on the center of the trim accent so that the adhesive bonds to the fender.


**STEP 8** Slowly remove the remaining backing pieces from the trim accent as shown in PIC. 3.

**STEP 9** Press the tips of the trim accent in place so that they bond to the fender.

**STEP 10** Press and hold the trim accent for one (1) minute, full bonding strength will occur in 24 hours.

*Ride On!*

PIC. 2

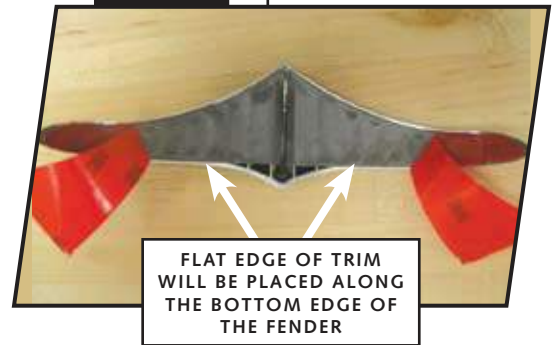

PIC. 3



PAGE

**2**