


EASY INSTALL: Tsunami Fender

- Fits stock '94-'03 H-D XL's • Precision die stamped & CNC laser cut construction
- Heavy gauge 606 T-6 aluminum • Available in Raw Aluminum, Black or Silver anodized finishes



"Lose Those Stock Parts..."

1.
 - a) Remove rear wheel.
 - b) Remove seat, & disconnect wiring for rear lights.
 - c) Remove shocks & any trim pieces preventing removal of fender.
 - d) Remove rear fender.

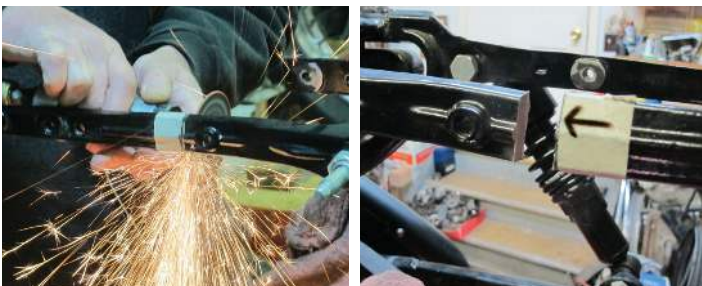

"Cut Through It Like Butter..."

2.
 - a) Decide where you want to cut the strut mounts off.
 - b) Use a cutting wheel, jigsaw or hacksaw to cut the strut mounts.

"Bada-Bing, Bada-Boom! That Was Easy!"

2.



"Time To Clean Her Up!"

3.
 - a) If you so desire, use a grinding wheel to round the edges, and clean up the strut mount arms.
 - b) Use some spray paint to cover up where you've been grinding.
 - c) Now is a good time to install a tail light on your new fender.

3.



"Easy, Peezey... We're Almost There..."

4.
 - a) Slide Tsunami Fender into place, insert & tighten the 3 bolts.
 - b) Hook up wiring for your light(s) if you installed any.
 - c) Re-Install rear wheel, shocks & anything else. This is the last step!

4.

Go For A Ride.



RAW ALUMINUM - SKU: 003638



SILVER ANODIZED - SKU: 003640



BLACK ANODIZED - SKU: 003639